



# FRAMELESS JULIET – INSTALLATION GUIDE

UNLESS OTHERWISE STATED ALL DIMENSIONS IN MILLIMETRES AND APPLY TO STANDARD HEIGHT SYSTEMS.  
DO NOT SCALE FROM ANY DRAWINGS.


BALCONETTE, UNIT 6 SYSTEMS HOUSE, EASTBOURNE ROAD, BLINDLEY HEATH, SURREY, RH7 6JP  
TEL: 01342 410 411 FAX: 01342 410 412 WWW.BALCONETTE.CO.UK

**Before you start:**


- Check you have all the parts of the order.
- Check the height of the glass panel.
- Check the system can span the opening in the structure.
- Read and understand these instructions before starting installation.

## Frameless Juliet System Details


Elevation View

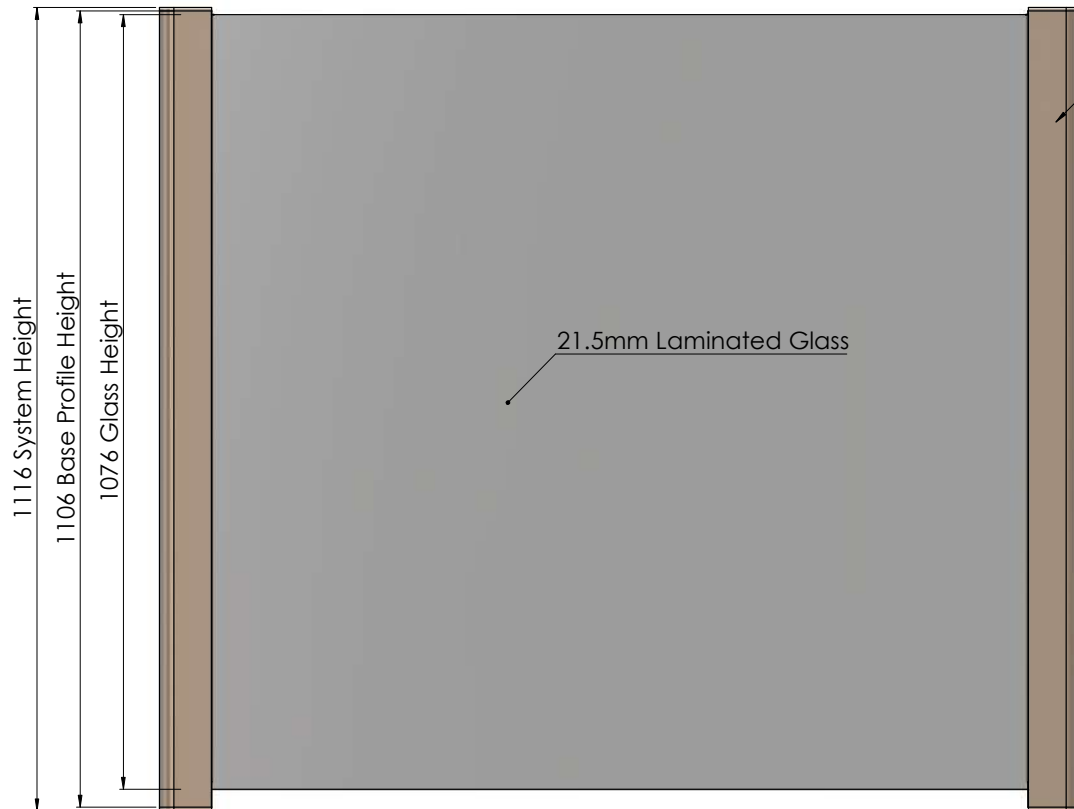

Section View

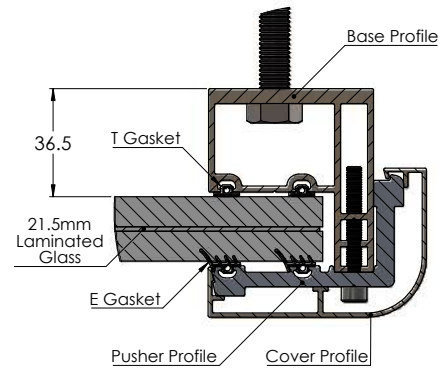

Plan View

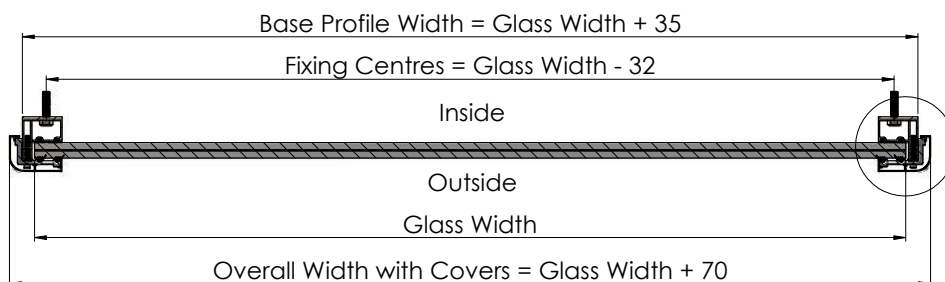


**Not Supplied:** Silicone and fixings to the structure are not included.


Frameless Juliet Side - Exploded View



**Not Supplied:** Silicone and fixings to the structure are not included.

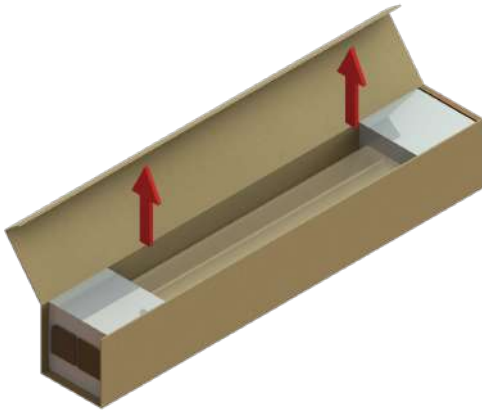

01) Unpack your Juliet.

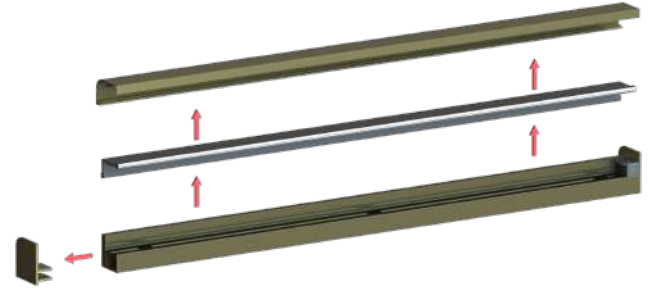

02) Remove the top cap, cover profile and pusher profile and place to one side.




03) Measure the structural opening and the width of the glass panel and calculate the position of the base profiles. The base profile width equals the glass width plus 35mm.




04) Check the position of the profiles so that the top of the glass (once installed) will achieve a minimum of 1100mm from the finished floor level.




05) Check the area the glass will occupy for any obstructions so there is nothing in the way of it being freely installed.

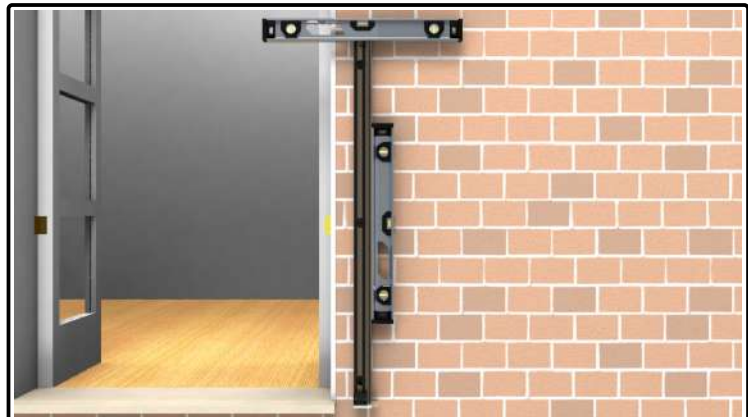


06) Ensure the base profile is perfectly level both horizontally and vertically.

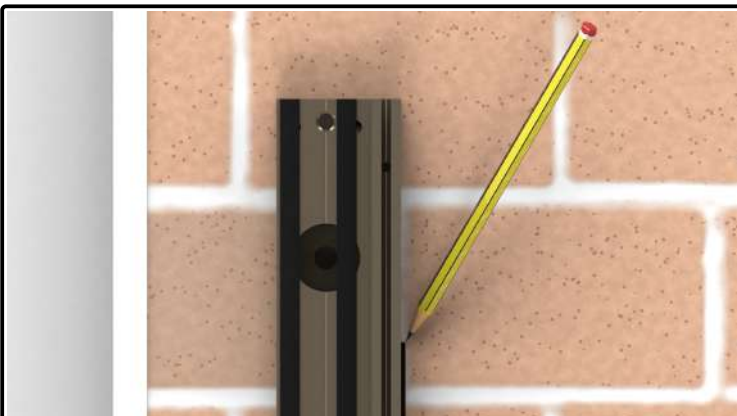


07) Mark the position of the base profiles, the fixing locations and prepare the structure for fixings.

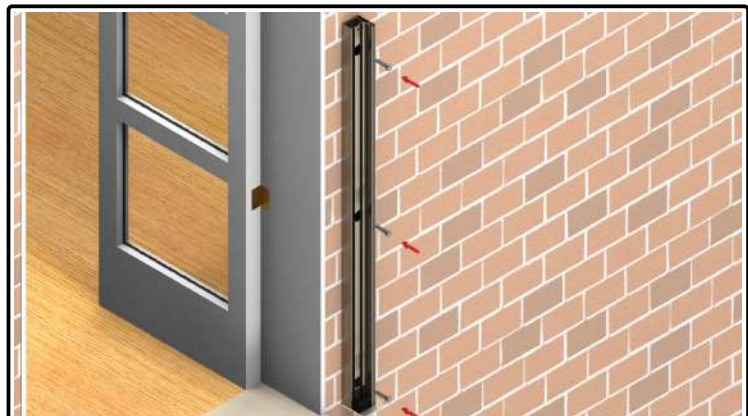

08) With suitable fixings fix the first base profile securely to the structure.

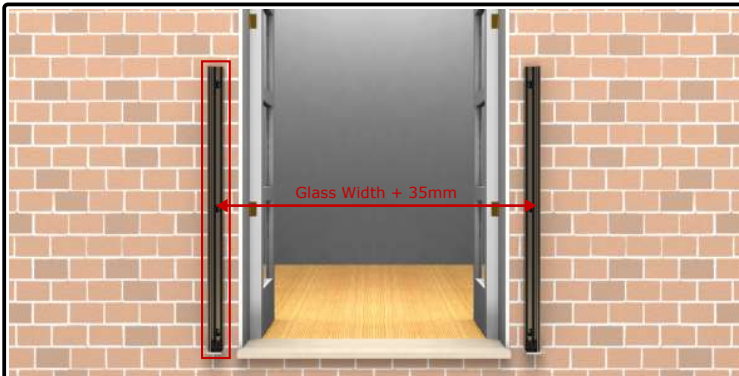

09) Locate the second base profile on the other side, parallel and at the same height to the first one. Ensure the external width of the base profiles equals Glass Width + 35mm.

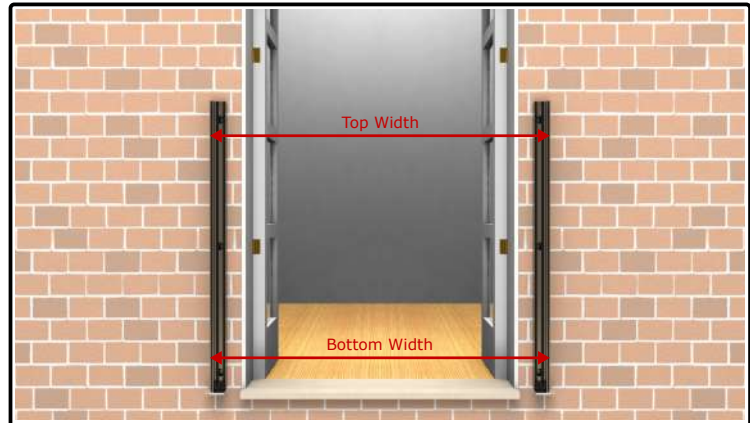


10) Check that there is an equal width top and bottom.



11) Check the two base profiles start at the same level. Mark and prepare the structure for fixings.




12) With suitable fixings fix the second base profile securely to the structure.

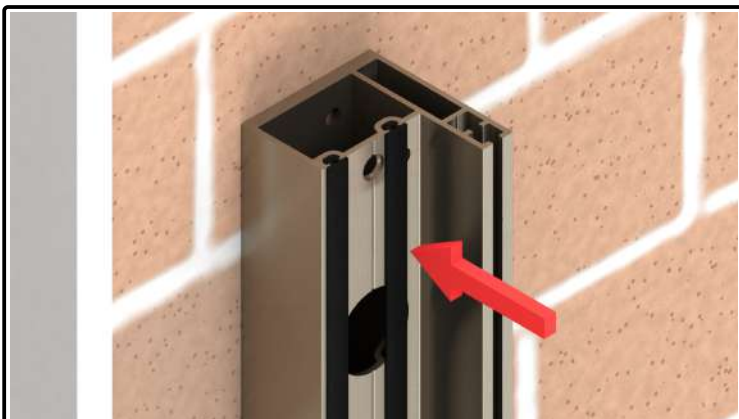


13) Ensure the T gaskets are flat and all in place in the base profiles.



14) Remove any labels, spacers or film from the glass panel.

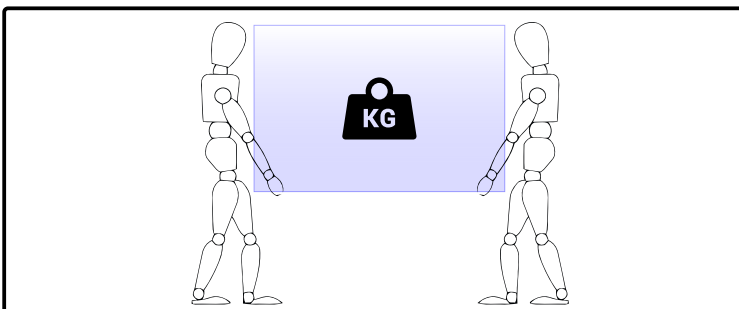

15) Frameless Juliet glass panels can be very heavy and large. Please plan your path to installation, check the weight and size of the glass, and make sure you are using the correct equipment and/or enough manpower, a safe working platform and have enough room to hold and manoeuvre the glass panel into position safely.

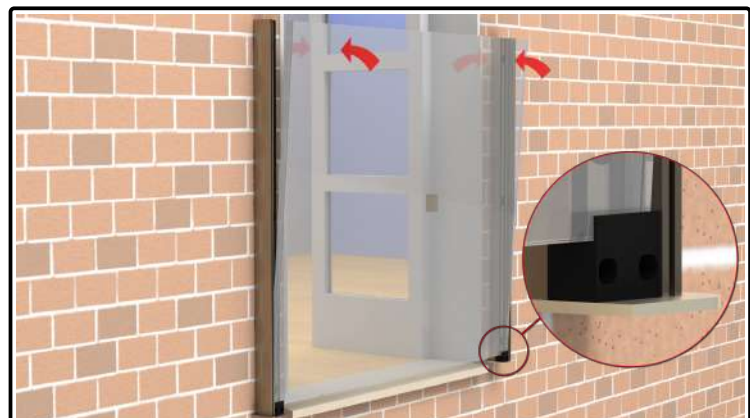


16) Seat the glass panel centrally onto the plastic glass stoppers and pivot it up to make full contact with the T Gaskets.




17) Clamp the glass in place by fixing the pusher profiles to the base profiles with the provided sixteen 4.8 x 38mm self tapping screws, eight per pusher profile.



18) The glass is now fully supported.

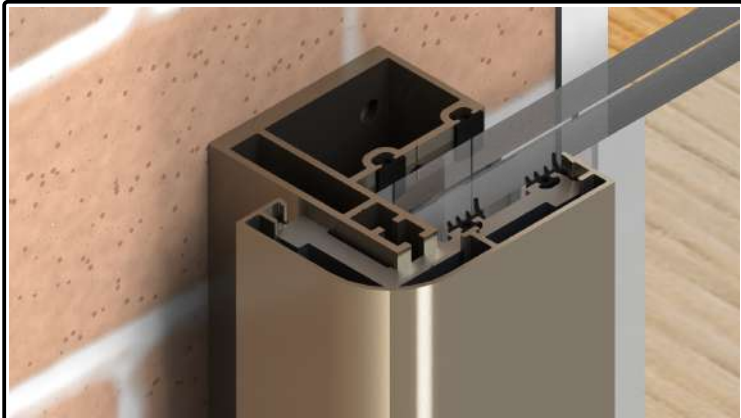

19) Clip the cover profiles onto the pusher profiles.

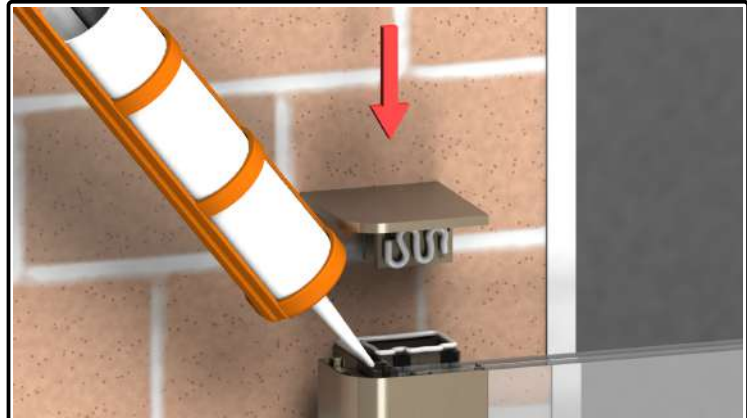

20) Apply silicone to the top caps and base profiles and slide the top caps into place to complete your installation.

